 
 


## Tilt Rod



 
**Standard Tilt Rod  
Standard Location**

In the middle of the panel on front side (Default)



**Offset Tilt Rod\*  
Standard Location**

On the front side of the panel and at 1" from the louver ends on hinged side.  
Optional location: per customer request

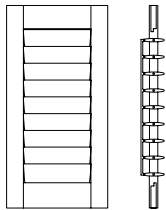

**Hidden Tilt Rod\*  
Standard Location**

Tilt rod attached to the louver's edge on the back and the hinged side of the panel and flush with the edge of louver. It sits in route area of stile when louvers are in close position. Tilt rod is split when the number of louvers exceeds the limit as shown below:

Louver Size	Maximum Possible Louvers (approximately 48" in panel height)
2 ½ "	21
3 ½ "	14
4 ½ "	10

- For even number of louvers, number of louvers operated by the top and the bottom hidden tilt rods will be the same.
- For odd number of louvers, number of louvers operated by the top hidden tilt rod will be one more than number of louvers operated by the bottom tilt rod.

