 
 


## Tilt Rod



 
**Standard Tilt Rod**  
**Standard Location**

In the middle of the panel on front side (Default)



**Offset Tilt Rod\***  
**Standard Location**

On the front side of the panel and at 1" from the louver ends on hinged side.  
Optional location: per customer request

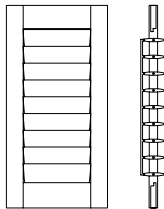

**Hidden Tilt Rod\***  
**Standard Location**

Tilt rod attached to the louver's edge on the back and the hinged side of the panel. It projects another 1/4" beyond the louvers and it is not available for 1 7/8" louver. Tilt rod is split when the number of louvers exceeds the limit as shown below:

| Louver Size | Maximum Possible Louvers<br>(approximately 48" in panel height) |
|-------------|---|
| 2 1/2 "     | 21  |
| 3 1/2 "     | 14  |
| 4 1/2 "     | 10  |

- For even number of louvers, number of louvers operated by the top and the bottom hidden tilt rods will be the same.
- For odd number of louvers, number of louvers operated by the top hidden tilt rod will be one more than number of louvers operated by the bottom tilt rod.